



Finger Board II PCB Silkscreen and Parts placement guide.

Silkscreen

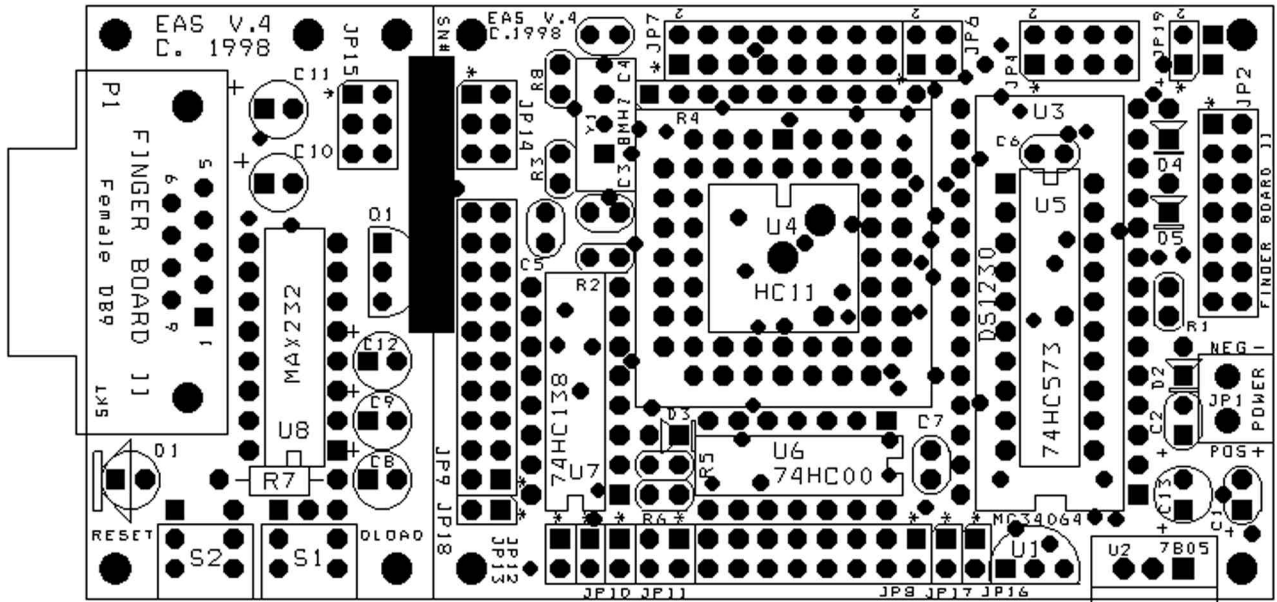

Parts Placement

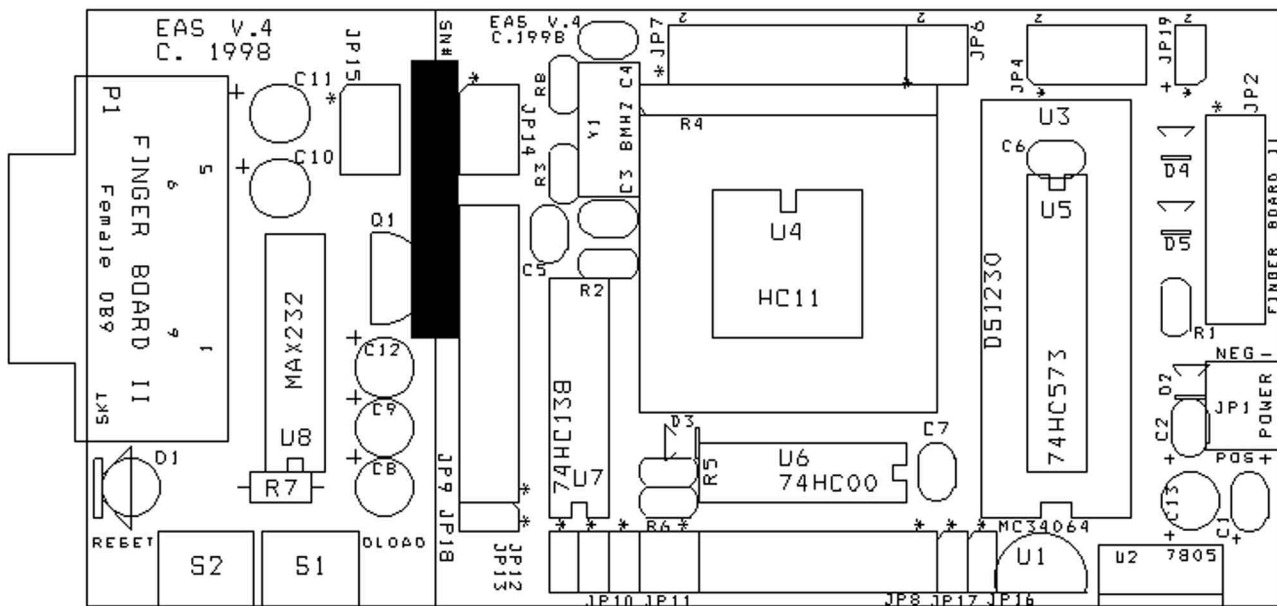

Embedded Acquisition Systems
1565 Shrader Street
San Francisco, CA 94117
<http://www.hooked.net/~jfung>
email jfung@hooked.net
copyright 1998